

# Quick SETUP for USB Scanners

## GETTING STARTED

### USB Connection

1. Turn off power before connecting the scanner.
2. Power up computer once scanner is fully connected.

### SCAN THE FOLLOWING:

Keyboard:



USB Keyboard (PC)



AT/PS2 Keyboard Wedge  
(Default)

Carriage Return after barcode:



Add CR Suffix

Save Settings:



Save

Finished - Start Scanning Books



### Factory Defaults

The following bar code resets all factory defaults.



Factory Default

### TRIGGER:

Following barcodes will allow you to use the reader in:

- **Manual Trigger mode** (press the trigger to read),
- **Automatic Trigger mode** (beam is always on),
- **Presentation mode** (reader activated when it “sees” a barcode)



Manual Trigger  
(Default)



Automatic Trigger



Presentation Mode

## Additional Options

### Beeper Volume

Default = High.



\* High



Medium



Low



Off

### Beeper Tone



\* Normal Beep



Short Beep

### Reread Delay

Sets time period before the scanner can read the *same* bar code a second time. Setting a reread delay protects against accidental rereads of the same bar code.

- Longer delays - effective in minimizing accidental rereads.
- Use shorter delays in applications where repetitive bar code scanning is required. *Default = Short.*

**Reread Delay only works in automatic trigger mode**



\* Short



Medium



Long

### Good Read Delay

Sets the minimum amount of time before the scanner can read another barcode. *Default = No Delay.*



\* No Delay



Short Delay



Medium Delay



Long Delay